

Front (Driver & Passenger) Installation guide for 63-67 Corvette Coupe and Convertible.

6. Take the webbing and using the opening on the web guide, slide the belt thru the top of the web guide as seen in Illustration 6A. Once the belt is thru the loop, pull the belt thru till you have a sufficient length to attach the belt to the original mount. Attach the belt to the original mount and mount the belt latch end to the original mount using the bolt and nut. Pull the tongue down to latch and make sure that the webbing is not being twisted along the upper or lower restraint.

6.


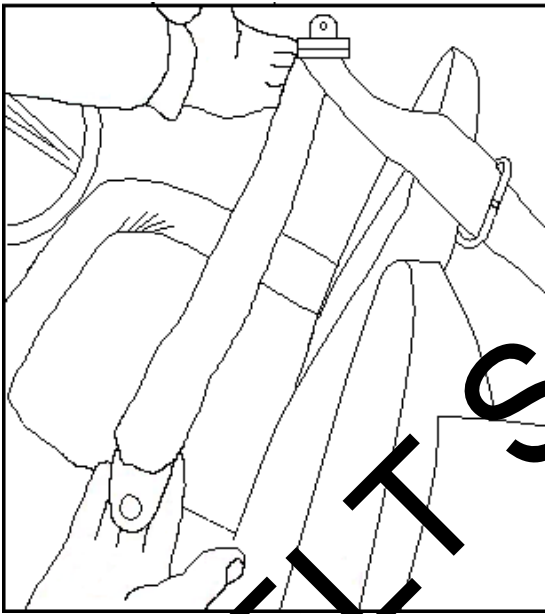


Illustration 6A

Illustration 6B

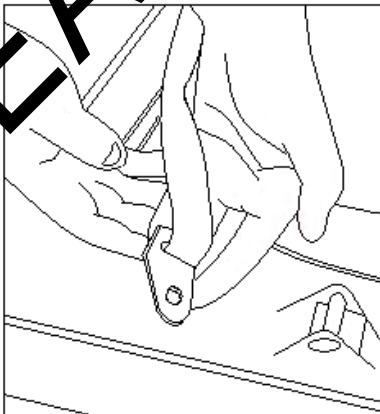

Note: pull the tongue to your latch to complete the three point assembly. make sure the webbing is moving freely from the retractor thru the guide.

Illustration 6C

