

FACTORY MOUNT POINT

ON '67 AND EARLIER MODEL CARS,  
THERE IS NO FACTORY PROVISION  
FOR A SHOULDER HARNESS.  
ANCHORAGE MUST BE PROVIDED  
BY INSTALLER.



MOUNT DROP SASH  
TO ORIGINAL SHOULDER  
HARNESS ANCHOR POINT.  
USE ORIGINAL OR  
SUPPLIED HARDWARE


SIDE WINDOW

FRONT OF VEHICLE →

SEATBELT SOLUTIONS IS  
RESPONSIBLE FOR THE  
MANUFACTURE OF THIS SAFETY  
PRODUCT, INSTALLATION IS NOT  
WARRANTED.

MOUNT RETRACTOR TO ORIGINAL  
ANCHORAGE POINT IN DOOR SILL.  
PLACE 5" ANCHOR BETWEEN  
RETRACTOR AND SILL. USE ORIGINAL  
OR SUPPLIED HARDWARE.

FACTORY MOUNT POINT

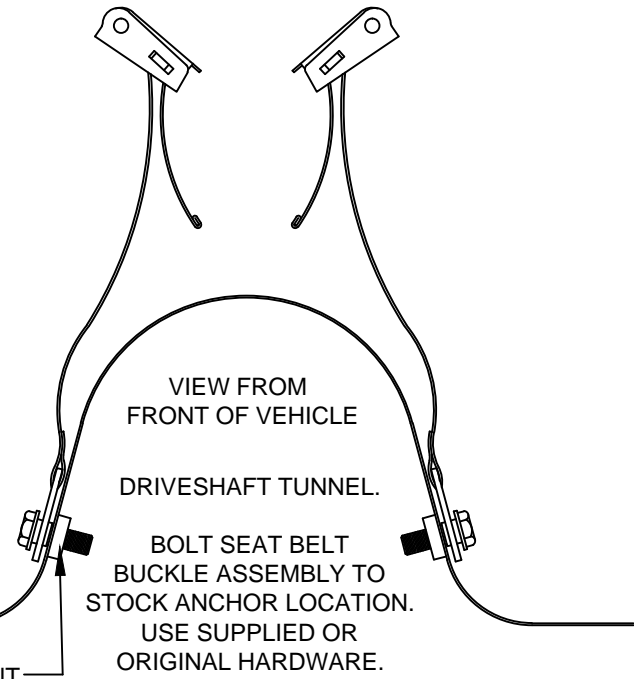

VIEW FROM  
FRONT OF VEHICLE

DRIVESHAFT TUNNEL.

BOLT SEAT BELT  
BUCKLE ASSEMBLY TO  
STOCK ANCHOR LOCATION.  
USE SUPPLIED OR  
ORIGINAL HARDWARE.

FACTORY MOUNT POINT